

SR-300R PREMIUM Roughter **EJIB**



<http://www.kato-works.co.jp>

- Before you use the crane, study the instruction manual thoroughly and follow the instructions it contains.
- Some differences may arise between the machine delivered and the photographs in the catalog due to the country the crane will be used in or any added improvements.
Note : The specification may be changed without notice.
- The actual colors of the body and interior may appear slightly different from those shown in this catalogue due to the limitations of photography and printing.

● Contact for enquiry:

KATO KATO WORKS CO.,LTD.
QUALITY & EXPERIENCE
SINCE 1895

SR-300R

9-37, Higashi-ohi 1-chome, Shinagawa-ku, Tokyo, 140-0011, Japan / Tel.: Head Office: Tokyo +81 (0)3 3458-1111 Overseas Marketing Department: Tokyo +81 (0)3 3458-1115 / FAX: Tokyo +81 (0)3 3458-1163

SR-300R

Rough Terrain Crane

PREMIUM
Roughter

EJIB



KATO



Smooth Lifting



30.5m

Number of times necessary for the operator to leave the cabin during jib mounting has been greatly reduced to only 2 with the Ejib!

This has shortened the time required for jib mounting and remarkably making the jib mounting for the operator more easier.



- Tension rod connection
- Release the jib
- Setting the auxiliary hook to the jib tip
- Derrick the boom and swing out the jib



Jib mounting made possible even when boom is retracted

It is a possible for the jib to switch positions to being under the boom while the boom is retracted. It has a jib aerial swingout mechanism thanks to the derrick cylinder. Highly efficient and requires less space for deployment.



■ Tail slewing radius **3.1m**

9.35m

83°

● Boom lifting capacity **SUPERBOOM**

- Boom type..... 4-section round shaped Full Power Boom
- Maximum lifting capacity..... **30t×3.0m**
- Boom length..... **9.35m-30.5m**
- Maximum lifting height..... **31.2m**

● Jib lifting capacity **Ejib**

- Jib type..... 2-section hydraulic luffing power Jib
- Jib offset angle..... **5°-60°**
- Jib length..... **8.7m-13.1m**
- Maximum lifting height..... **44.8m**

Standard & Optional Equipment



▼ Cabin

K•COR



● The K•COR is data logger system which records working status of crane. Record is extractable by the SD card and capable to confirm through K•COR program.



Touch screen control ACS moment limiter

A range of limiting functions to increase Safety during Operation.



▲ Rear step with safety handles



▲ LED combination rear light



▲ Way side lamp (option)



▲ New non slip aluminum step



H-type Outrigger



▲ Anemometer (option)



▲ Left side view camera (option)



▲ Right side view camera (option)

All new bumper design

● LED head light with Hi and Lo selector



[SPECIFICATION]

■ CRANE

Description		Rough terrain crane with maximum lifting capacity 30 ton	
● Crane Specification			
Maximum rated lifting capacity	9.35 m Boom	30,000kg × 3.0m (Parts of line : 9)	
	16.4 m Boom	19,000kg × 4.0m (Parts of line : 6)	
	23.45 m Boom	12,500kg × 5.5m (Parts of line : 4)	
	30.5 m Boom	8,000kg × 7.5m (Parts of line : 4)	
	8.7 m Jib	3,300kg × 75° (Parts of line : 1)	
	13.1 m Jib	2,100kg × 73° (Parts of line : 1)	
Rooster	4,000kg (Parts of line : 1)		
Boom length	9.35m — 30.5m		
Fly jib length	8.7m — 13.1m		
Maximum rated lifting height	31.2m (Boom) 44.8m (jib)		
Hoisting line speed (winch up)	Main winch	125m / min. (at 4th layer)	
	Auxiliary winch	125m / min. (at 4th layer)	
Hoisting hook speed (winch up)	Main winch	(Parts of line; 9) : 13.8m / min. (at 4th layer)	
	Auxiliary winch	(Parts of line; 1) : 125.0m / min. (at 4th layer)	
High-speed lowering Rope speed	Main winch	Reference value with no load at 163m / min. (at 4th layer)	
	Auxiliary winch		
Boom derricking angle	0° — 83°		
Boom derricking time	40s / 0° — 83°		
Boom extending speed	9.35 — 30.5m / 93s		
Slewing speed	2.9min ⁻¹		
Tail slewing radius	3,100mm		
● Equipment and structure			
Boom type	Round-shaped, 4-section hydraulically telescopic type (Boom section 3 / 4 simultaneously operated)		
Jib type	2 sections (2nd section of draw-out type) Hydraulic stepless tilting type (offset angles 5° — 60°)		
Boom extension/retraction equipment	Two hydraulic cylinders and wire ropes used together		
Boom derricking/lowering equipment	One hydraulic cylinder of direct acting type with pressure-compensated flow control valve		
Winch system Main & Auxiliary winches	Driven by axial plunger type hoisting motor through planetary gear reduction. Controlled independently by High/Low speed switching type. Respective operating lever. Equipped with automatic brake.		
Slewing equipment	Equipped with Hydraulic motor drive and a planetary gear speed reducer (built-in negative brake) Free/Lock change-over model		
Slewing bearing	Ball bearing type		
Outriggers	Type	Hydraulic H-beam type (with float and vertical cylinder in single unit)	
	Extension width	6,600mm (Fully extended)	
		6,000mm (Intermediately extended)	
		5,000mm (Intermediately extended)	
		3,800mm (Intermediately extended)	
2,310mm (Fully retracted)			
Wire rope for hoisting	Main winch	Diameter: 16mm × Length: 175m	
	Auxiliary winch	Diameter: 16mm × Length: 95m	
● Hydraulic equipment			
Oil pump	4 pumps, plunger and gear type		
Hydraulic motor	Hoisting motor	Axial plunger type	
	Slewing motor	Axial plunger type	
Control valve	Double acting with integral check and relief valves (With Hydraulic compensated flow control valve)		
Cylinder	Double acting type		
Oil reservoir capacity	500L		
● Safety devices			
ACS (Automatic Crane System with Voice alarm), Slewing automatic stop system, Boom raise / lower dampening function, Boom extension / retraction dampening function, Working range limit mode, Outrigger status detector, Boom derricking / telescoping holding valve, Jib derricking holding valve, Overhoist prevention device, Winch holding valve, Automatic winch brake, Winch drum roller, Hydraulic safety valves, Outrigger lock pins, Slewing lock, Slewing warning lamp, Hydraulic oil temperature warning device, Hydraulic oil return filter warning device			
● Standard equipment			
Air conditioner(with cold/warm box), Hydraulic oil cooler Working light (on boom, table and cab) Winch drum turning indication device, Hook for 30 ton, Hook for 4 ton			
● Operator's cab			
Hydraulic cab suspension, Adjustable steering wheel, Adjustable suspension seat, Power Window(external closing switch), Front windscreen wiper & washer (2 speed wiper), Roof window wiper & washer, Tea table, Cigarette lighter, Access step light, Floor mat, AM/FM Radio, Hot and cool box			
● Optional equipment			
ACS outside indicator, PA system, Door visor, Anemometer Winch view camera, Fire Extinguisher, K-COR(KATO Crane Operating Recorder)			





■ CARRIER

● Carrier Specification		
Maximum traveling speed	49km/h	
Grade ability	59% (computed at G.V.W. = 26515kg)	
Minimum turning radius (center of extreme outer tire)	8.2m (2 wheel steer)	
	4.9m (4 wheel steer)	
● Engine		
Model	Mitsubishi 6M60-TLE3A (with Intercooled turbocharger)	
Type	4 cycle, 6 cylinders, water cooled, direct injection turbo-charged diesel engine with intercooling	
Piston displacement	7.545L	
Max. power	200kW at 2,600min ⁻¹	
Max. torque	785N·m at 1,400min ⁻¹	
● Equipment and structure		
Drive system	Switches between 2 wheel drive (4x2) and 4 wheel drive (4x4)	
Torque converter	Engine mounted 3 elements 1 stage (with lock up clutch)	
Transmission	Remote mounted full automatic	
Number of speeds	4 forward & 1 reverse speed (with HI - Low selector)	
Axles	Front	Planetary, drive/steer type
	Rear	Planetary, drive/steer type
Suspension	Front	Taper-leaf spring, Hydraulic locking device with shock absorber
	Rear	Taper-leaf spring, Hydraulic locking device with shock absorber
Brake system	Service	Air-over hydraulic disk brake on 4 wheels (front and rear independent circuit)
	Parking	Spring applied, electrically air released parking brake mounted on front axle, internal expanding type
	Auxiliary	Exhaust brake, Eddy current retarder, Service brake lock
Steering	Model	Full hydraulic power steering, Completely independent front and rear steering (with automatic rear wheel steering lock system)
	Mode	Front 2 wheel steering, counter steering, crab steering, rear 2 wheel steering, independent front and rear wheel steering (5 modes) (with automatic rear steering lock system)
Tire size	Front	385 / 95 R25 170E ROAD
	Rear	385 / 95 R25 170E ROAD
Fuel tank capacity	300 L	
Batteries	(12V-120AH) × 2	
● Safety devices		
Emergency steering device, Rear wheel steering lock system (automatic), Brake fluid leak warning device, Service brake lock, Suspension lock, Engine overspeed alarm, Radiator coolant level warning device, Air filter service warning device, Electrically retractable side view mirrors		
● Standard equipment		
Centralized lubricating system		
● Optional equipment		
Right side view camera, Left side view camera, Wheel stopper, Way side lamp, Side marker lamp		
■ GENERAL Dimensions		
Overall length	11,565mm	
Overall width	2,620mm	
Overall height	3,475mm	
Wheel base	3,650mm	
Treads	Front	2,170mm
	Rear	2,170mm
Passenger capacity	One person	
Gross vehicle weight	Gross weight	approx. 26,515kg
	Front weight	approx. 13,195kg
	Rear weight	approx. 13,320kg
● Stow the hooks in place before traveling.		
● Before you use this machine, read the precautions in the instruction manual thoroughly to operate it correctly.		
● KATO products and specifications are subject to improvements and changes without notice.		


RATED LIFTING CAPACITY

Based on ISO 4305
Not exceed 75% of static tipping loads

9.35m — 30.5m Boom

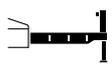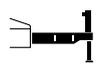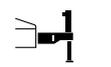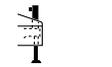Working radius (m)	 (6.6m)				 (6.0m)				 (5.0m)				 (3.8m)				 (2.31m)				
	Outriggers fully extended (360° full range)				Outriggers intermediately extended (over side)				Outriggers intermediately extended (over side)				Outriggers intermediately extended (over side)				Outriggers completely retracted (over side)				
	9.35m Boom	16.4m Boom	23.45m Boom	30.5m Boom	9.35m Boom	16.4m Boom	23.45m Boom	30.5m Boom	9.35m Boom	16.4m Boom	23.45m Boom	30.5m Boom	9.35m Boom	16.4m Boom	23.45m Boom	30.5m Boom	9.35m Boom	16.4m Boom	23.45m Boom	30.5m Boom	
2.5	30.00*	19.00	12.50		30.00*	19.00	12.50		30.00*	19.00	12.50		30.00*	19.00	12.50		12.00	11.60	9.20		
3.0	30.00*	19.00	12.50		30.00*	19.00	12.50		30.00*	19.00	12.50		30.00*	19.00	12.50		12.00	11.60	9.20		
3.5	27.20*	19.00	12.50	8.00	27.20*	19.00	12.50	8.00	27.20*	19.00	12.50	8.00	22.20	19.00	12.50	8.00	9.20	9.10	8.80	5.50	
4.0	23.00	19.00	12.50	8.00	23.00	19.00	12.50	8.00	23.00	19.00	12.50	8.00	16.50	15.90	12.50	8.00	7.25	7.10	7.40	5.50	
4.5	21.20	18.15	12.50	8.00	21.20	18.15	12.50	8.00	21.20	18.15	12.50	8.00	12.95	12.80	12.50	8.00	5.85	5.75	6.25	5.20	
5.0	19.40	17.00	12.50	8.00	19.40	17.00	12.50	8.00	17.90	17.00	12.50	8.00	10.55	10.40	10.80	8.00	4.80	4.70	5.40	4.55	
5.5	17.80	16.00	12.50	8.00	17.80	16.00	12.50	8.00	14.60	14.35	12.50	8.00	8.80	8.60	9.40	8.00	4.05	3.90	4.55	4.00	
6.0	16.30	15.05	12.20	8.00	16.30	15.05	12.20	8.00	12.20	12.00	12.20	8.00	7.45	7.30	8.05	7.95	3.40	3.25	3.90	3.55	
6.5	15.10	14.25	11.50	8.00	15.10	14.25	11.50	8.00	10.40	10.20	11.05	8.00	6.45	6.25	6.95	7.10	2.90	2.75	3.35	3.15	
7.0		13.45	10.80	8.00		12.25	10.80	8.00		8.80	9.60	8.00		5.40	6.10	6.40		2.30	2.90	2.80	
7.5		12.70	10.20	8.00		10.60	10.20	8.00		7.70	8.45	8.00		4.70	5.35	5.70		1.95	2.50	2.45	
8.0		11.10	9.60	7.60		9.30	9.60	7.60		6.75	7.50	7.60		4.10	4.75	5.10		1.60	2.20	2.20	
9.0		8.75	8.60	6.90		7.35	8.10	6.90		5.35	6.05	6.35		3.20	3.80	4.10		1.00	1.65	1.70	
10.0		7.10	7.70	6.25		5.95	6.65	6.25		4.30	4.95	5.25		2.50	3.10	3.40		0.50	1.20	1.35	
11.0		5.80	6.50	5.70		4.90	5.55	5.70		3.50	4.15	4.45		1.95	2.55	2.80			0.80	1.00	
12.0		4.85	5.50	5.20		4.10	4.75	5.00		2.85	3.50	3.75		1.45	2.10	2.35					
13.0		4.10	4.70	4.80		3.40	4.05	4.35		2.30	2.95	3.25		1.05	1.70	1.95					
13.5		3.75	4.40	4.60		3.10	3.75	4.05		2.05	2.70	3.00		0.85	1.50	1.80					
14.0			4.05	4.35			3.50	3.75			2.45	2.75			1.35	1.65					
15.0			3.55	3.80			3.00	3.30			2.10	2.35			1.05	1.35					
16.0			3.10	3.35			2.60	2.90			1.75	2.05			0.80	1.10					
17.0			2.70	2.95			2.25	2.55			1.45	1.75			0.55	0.85					
18.0			2.35	2.60			1.95	2.20			1.20	1.50				0.65					
19.0			2.05	2.30			1.65	1.95			1.00	1.25				0.45					
20.0			1.75	2.05			1.45	1.70			0.80	1.10									
20.5			1.65	1.90			1.35	1.60			0.70	1.00									
21.0				1.80				1.50				0.90									
22.0				1.60				1.30				0.70									
24.0				1.25				0.95													
26.0				0.95				0.70													
27.9				0.75				0.45													
Critical boom angle	—	—	—	—	—	—	—	—	—	—	—	35°	—	—	34°	46°	—	41°	56°	65°	
Standard hook	for 30 ton				for 30 ton				for 30 ton				for 30 ton				for 30 ton				
Hook mass	220kg				220kg				220kg				220kg				220kg				
Parts of line	9*7	6	4	4	9*7	6	4	4	9*7	6	4	4	9*7	6	4	4	7	6	4	4	


(Unit : Metric ton)

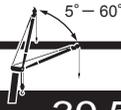

Based on ISO 4305
Not exceed 75% of static tipping loads

30.5m Boom + 8.7m Jib

(6.6m)								(6.0m)								(5.0m)										
Outriggers fully extended (360° full range)								Outriggers intermediately extended (over side)								Outriggers intermediately extended (over side)										
Boom angle (°)	Offset 5°		Offset 25°		Offset 45°		Offset 60°		Boom angle (°)	Offset 5°		Offset 25°		Offset 45°		Offset 60°		Boom angle (°)	Offset 5°		Offset 25°		Offset 45°		Offset 60°	
	Working radius (m)	Load (ton)		Working radius (m)	Load (ton)	Working radius (m)	Load (ton)	Working radius (m)	Load (ton)	Working radius (m)	Load (ton)		Working radius (m)	Load (ton)												
83	4.9	3.30	7.4	2.30	9.2	1.60	9.8	1.05	83	4.9	3.30	7.4	2.30	9.2	1.60	9.8	1.05	83	4.9	3.30	7.4	2.30	9.2	1.60	9.8	1.05
75	10.9	3.30	13.0	2.30	14.2	1.53	14.4	1.05	75	10.9	3.30	13.0	2.30	14.2	1.53	14.4	1.05	75	10.9	3.30	13.0	2.30	14.2	1.53	14.4	1.05
73	12.3	3.25	14.3	2.28	15.4	1.49	15.5	1.05	73	12.3	3.25	14.3	2.28	15.4	1.49	15.5	1.05	73	12.3	3.25	14.3	2.28	15.4	1.49	15.5	1.05
71	13.6	2.93	15.5	2.14	16.5	1.45	16.6	1.04	71	13.6	2.93	15.5	2.14	16.5	1.45	16.6	1.04	71	13.6	2.93	15.5	2.14	16.5	1.45	16.6	1.04
69	14.9	2.65	16.7	1.99	17.6	1.43	17.7	1.04	69	14.9	2.65	16.7	1.99	17.6	1.43	17.7	1.04	69	14.9	2.46	16.7	1.99	17.6	1.43	17.7	1.04
65	17.4	2.23	19.0	1.76	19.7	1.37	19.7	1.04	65	17.4	2.23	19.0	1.76	19.7	1.37	19.7	1.04	68	15.4	2.27	17.3	1.93	18.1	1.41	18.2	1.04
62	19.1	1.99	20.6	1.62	21.3	1.34	21.0	1.04	62	19.1	1.92	20.6	1.62	21.3	1.34	21.0	1.04	64	17.6	1.60	19.4	1.40	20.3	1.33	20.2	1.04
58	21.3	1.72	22.7	1.46	23.2	1.31			60	20.2	1.65	21.7	1.51	22.2	1.33			62	18.7	1.33	20.4	1.19	21.2	1.14	21.0	1.04
56	22.4	1.48	23.8	1.37	24.2	1.27			58	21.2	1.43	22.7	1.31	23.2	1.30			61	19.8	1.10	21.4	0.99	22.1	0.97		
55	22.9	1.39	24.2	1.30	24.6	1.27			55	22.7	1.14	24.1	1.06	24.5	1.05			55	22.4	0.62	23.9	0.55	24.3	0.55		
50	25.3	0.98	26.5	0.91	26.5	0.91			50	25.1	0.75	26.3	0.70	26.5	0.70			53	23.3	0.48	24.9	0.40	25.1	0.40		
46	27.0	0.71	28.0	0.68	28.0	0.68			46	26.9	0.49	27.9	0.46	27.9	0.46			Critical boom angle	52°		52°		52°		61°	
45	27.4	0.65	28.4	0.62					45	27.4	0.42	28.3	0.41					Standard hook	for 4 ton							
40	29.5	0.38	30.4	0.35					Critical boom angle	44°		44°		45°		61°		Hook mass	60kg							
Critical boom angle	39°		39°		45°		61°		Standard hook	for 4 ton						Parts of line	1									
Standard hook	for 4 ton								Hook mass	60kg								Parts of line	1							
Hook mass	60kg								Parts of line	1																
Parts of line	1																									

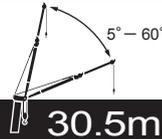

30.5m Boom + 8.7m Jib

(3.8m)								
Outriggers intermediately extended (over side)								
Boom angle (°)	Offset 5°		Offset 25°		Offset 45°		Offset 60°	
	Working radius (m)	Load (ton)						
83	4.9	3.30	7.4	2.30	9.2	1.60	9.8	1.05
76	10.2	3.30	12.3	2.30	13.6	1.55	13.9	1.05
75	10.9	2.96	13.0	2.30	14.2	1.53	14.4	1.05
71	13.2	1.96	15.2	1.63	16.5	1.45	16.6	1.04
68	14.9	1.40	16.9	1.17	18.0	1.09	18.2	1.04
65	16.6	0.97	18.5	0.82	19.4	0.79	19.6	0.78
62	18.3	0.59	20.2	0.48	20.9	0.48	20.9	0.48
Critical boom angle	61°		61°		61°		61°	
Standard hook	for 4 ton							
Hook mass	60kg							
Parts of line	1							

48A-75102000

30.5m Boom + 13.1m Jib

(6.6m)								(6.0m)																		
Outriggers fully extended (360° full range)								Outriggers intermediately extended (over side)																		
Boom angle (°)	Offset 5°		Offset 25°		Offset 45°		Offset 60°		Boom angle (°)	Offset 5°		Offset 25°		Offset 45°		Offset 60°										
	Working radius (m)	Load (ton)		Working radius (m)	Load (ton)																					
83	5.8	2.10	9.8	1.25	12.8	0.85	14.0	0.65	83	5.8	2.10	9.8	1.25	12.8	0.85	14.0	0.65									
77	11.0	2.10	14.4	1.25	16.8	0.85	17.6	0.65	77	11.0	2.10	14.4	1.25	16.8	0.85	17.6	0.65									
73	14.2	2.10	17.3	1.20	19.3	0.85	20.0	0.65	73	14.2	2.10	17.3	1.20	19.3	0.85	20.0	0.65									
71	15.7	2.03	18.7	1.15	20.5	0.85	21.0	0.64	71	15.7	2.03	18.7	1.15	20.5	0.85	21.0	0.64									
65	19.9	1.62	22.5	1.03	24.0	0.83	24.1	0.63	65	19.9	1.62	22.5	1.03	24.0	0.83	24.1	0.63									
62	21.8	1.48	24.3	0.99	25.5	0.81	25.7	0.63	62	21.8	1.48	24.3	0.99	25.5	0.81	25.7	0.63									
60	23.1	1.38	25.5	0.96	26.6	0.80			60	23.1	1.37	25.5	0.96	26.6	0.80											
55	26.1	1.15	28.3	0.91	29.0	0.79			59	23.7	1.27	26.1	0.94	27.1	0.80											
53	27.2	1.00	29.3	0.89	29.9	0.79			57	24.9	1.09	27.2	0.92	28.0	0.80											
51	28.2	0.87	30.2	0.80	30.6	0.79			55	26.1	0.92	28.3	0.84	29.0	0.79											
46	30.6	0.58	32.3	0.54	32.4	0.54			50	28.7	0.59	30.6	0.54	31.0	0.53											
45	31.1	0.52	32.7	0.49					48	29.7	0.48	31.5	0.44	31.7	0.44											
43	32.0	0.43	33.5	0.41					Critical boom angle	47°		47°		47°		61°										
Critical boom angle	42°		42°		45°		61°		Standard hook	for 4 ton																
Standard hook	for 4 ton								Hook mass	60kg								Parts of line	1							
Hook mass	60kg								Parts of line	1																
Parts of line	1																									

30.5m Boom + 13.1m Jib

(5.0m)								(3.8m)									
Outriggers intermediately extended (over side)								Outriggers intermediately extended (over side)									
Boom angle (°)	Offset 5°		Offset 25°		Offset 45°		Offset 60°		Boom angle (°)	Offset 5°		Offset 25°		Offset 45°		Offset 60°	
	Working radius (m)	Load (ton)		Working radius (m)	Load (ton)												
83	5.8	2.10	9.8	1.25	12.8	0.85	14.0	0.65	83	5.8	2.10	9.8	1.25	12.8	0.85	14.0	0.65
77	11.0	2.10	14.4	1.25	16.8	0.85	17.6	0.65	77	11.0	2.10	14.4	1.25	16.8	0.85	17.6	0.65
73	14.2	2.10	17.3	1.20	19.3	0.85	20.0	0.65	74	13.4	2.10	16.6	1.23	18.7	0.85	19.4	0.65
71	15.7	2.03	18.7	1.15	20.5	0.85	21.0	0.64	71	15.4	1.62	18.7	1.15	20.5	0.85	21.0	0.64
67	18.5	1.72	21.3	1.07	22.9	0.84	23.1	0.63	69	16.6	1.32	19.9	0.98	21.7	0.85	22.1	0.64
63	21.0	1.21	23.7	1.00	25.1	0.81	25.1	0.63	66	18.5	0.93	21.5	0.71	23.5	0.61	23.6	0.61
62	21.5	1.12	24.3	0.96	25.5	0.81	25.7	0.63	64	19.7	0.72	22.6	0.54	24.5	0.45	24.6	0.45
60	22.7	0.93	25.4	0.80	26.6	0.73			Critical boom angle	63°		63°		63°		63°	
55	25.5	0.54	27.9	0.47	29.0	0.39			Standard hook	for 4 ton							
Critical boom angle	54°		54°		54°		61°		Hook mass	60kg							
Standard hook	for 4 ton								Parts of line	1							
Hook mass	60kg																
Parts of line	1																

48A-75102000

■ When the outriggers are not used

Based on ISO 4305
Not exceed 75% of static tipping loads

														Working radius (m)
Working radius (m)	Stationary on rubber						Pick & carry (less than 2 km/h)							
	9.35m Boom		16.4m Boom		23.45m Boom		9.35m Boom		16.4m Boom		23.45m Boom			
	Over front	360° full range	Over front	360° full range	Over front	360° full range	Over front	360° full range	Over front	360° full range	Over front	360° full range		
3.0	13.50	8.10	9.00	7.30			10.00	6.10	6.60	5.10			3.0	
3.5	12.00	6.80	9.00	6.70	6.50	4.50	8.95	5.10	6.60	4.90	5.50	3.20	3.5	
4.0	10.75	5.80	9.00	5.65	6.50	4.50	8.00	4.30	6.60	4.10	5.50	3.20	4.0	
4.5	9.65	4.90	9.00	4.60	6.50	4.50	7.10	3.65	6.60	3.45	5.50	3.20	4.5	
5.0	8.70	4.00	8.20	3.75	6.50	4.30	6.40	3.10	6.00	2.75	5.50	3.20	5.0	
5.5	7.80	3.35	7.40	3.10	6.05	3.65	5.75	2.55	5.40	2.25	5.15	2.75	5.5	
6.0	7.00	2.80	6.60	2.55	5.65	3.10	5.20	2.15	5.00	1.80	4.80	2.35	6.0	
6.5	6.25	2.30	5.90	2.10	5.25	2.65	4.70	1.80	4.45	1.50	4.45	2.00	6.5	
7.0			5.20	1.70	4.85	2.30			3.90	1.20	4.15	1.70	7.0	
8.0			4.00	1.05	4.10	1.60			3.00	0.70	3.45	1.25	8.0	
9.0			3.15		3.50	1.05			2.40		2.80	0.90	9.0	
10.0			2.50		3.00	0.65			1.80		2.30		10.0	
11.0			2.00		2.50				1.30		1.90		11.0	
12.0			1.60		2.10				1.00		1.55		12.0	
13.0			1.25		1.75				0.75		1.25		13.0	
14.0					1.45						1.00		14.0	
15.0					1.20						0.75		15.0	
16.0					0.95						0.55		16.0	
17.0					0.75								17.0	
18.0					0.55								18.0	
Critical boom angle	—	—	—	50°	29°	59°	—	—	—	49°	38°	61°	Critical boom angle	
Standard hook	for 30 ton						for 30 ton						Standard hook	
Hook mass	220kg						220kg						Hook mass	
Parts of line	4						4						Parts of line	

(Unit : Metric ton)

■ Notes for the lifting capacity chart

■ When the outriggers are used

- The lifting capacity chart indicates the maximum load which can be lifted by this crane provided it is level and standing on firm level ground. The values in the chart include the mass of the main hook and slings for boom operation, and auxiliary hook and slings for jib operation.
[30 ton hook (mass: 220kg), 4 ton hook (mass: 60kg)]
Within the chart the figures in the area bordered with a thick line are based on structural limitations while other figures are determined by stability limitations.
- The working radii are the actual values allowing for boom and jib deflection. Therefore you must always operate the crane on the basis of working radius.
- The jib working radius is based on the jib mounted on the end of the 30.5m boom. When operating at other boom lengths, use the boom angle alone as the criterion.
- Do not operate the jib when the outriggers are completely retracted.
- The lifting capacities for the over sides vary with the outriggers extension width. Therefore for each outriggers extension condition you should work according the lifting capacity chart. Use the lifting capacity chart of outriggers full extended for both front and rear areas lifting capacities.




Outrigger extension status	Intermediate extension (6.0m)	Intermediate extension (5.0m)	Intermediate extension (3.8m)	Full retraction
Area α°	35	30	20	3

- The lifting capacity of the rooster sheave is the lifting capacity of the boom minus the mass of all attached hook, slings etc. to the boom, with an upper limit of 4,000kg.
[The hook for use with the rooster sheave is the 4 ton hook (mass: 60kg) with one part of line.]
- If the boom length, boom angle, working radius and/or jib angle exceeds the rated value, use the lifting capacity for the rated value or for the next one, whichever gives the smaller lifting capacity.
- If you are working with the boom while the jib is rigged, subtract 2,400 kg plus the mass of all attached hook, slings, etc. to the boom from the each lifting capacity of the boom, with an upper limit of 14 ton.
Do not use the rooster sheave in this situation. And do not operate the boom while the jib is rigged, when the outriggers are completely retracted.
- In whatever working conditions the corresponding boom critical angle is shown in the chart. The crane can tip over if the boom is lowered below the critical angle even if unloaded.
Therefore, never lower the boom below these angles.
- The standard parts of line for each boom length are as indicated in the chart. If you work with a non-standard number of parts of line, do not exceed 37.2kN (3.8tf) per wire rope respectively.
- If you are work with 9 parts of line on the hook, use the rooster sheave.
- High-speed lowering operation should only be performed to allow descent of the hook alone.
Avoid sudden lever operation. Also, you cannot perform high-speed lowering operation with more than 7 parts of line on the hook.
- Crane operation is permissible when a wind speed is less than 10m/s. Even in relatively light wind conditions, extra care should be taken when handling loads presenting large wind catching areas.
- If you work with a load in excess of the lifting capacity or use incorrect working procedures, you are risking damaging the crane or tipping it over. In such cases, the crane will not be guaranteed.

■ When the outriggers are not used


- The lifting capacity chart indicate the maximum load the crane can lift when its body is level on firm level ground with all tires inflated to the rated pressure and suspension cylinder completely retracted. The values in the chart include the mass of the main hook and slings.
Within the chart the figures in the area bordered with a thick line are based on structural limitations while other figures are determined by stability limitations.
[Rated tire pressure: 900kPa (9.0 kgf/cm²)]
- The working radii are the actual values allowing for boom deflection. Therefore you must always operate the crane on the basis of working radius.
- The lifting capacity differs between the front area capacity and the full range capacity. When slewing from the front to the side, take care that the crane could not be over loaded.

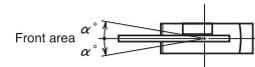

Crane operation	Stationary crane-on-rubber operation	Pick and carry operation
Area α°	1	1

- The lifting capacity of the rooster sheave is the lifting capacity of the boom minus the mass of all attached hook, slings etc. to the boom, with an upper limit of 4,000kg.
[The hook for use with the rooster sheave is the 4 ton hook (mass: 60kg) with one part of line.]
- If the boom length, boom angle, working radius and/or jib angle exceeds the rated value, use the lifting capacity for the rated value or for the next one, whichever gives the smaller lifting capacity.
- Do not work with the jib or with a boom length of more than 23.45m.
- For stationary crane-on-rubber operation, the parking brake and service brake lock device must be engaged.
- For pick and carry operation, the high/low speed switch must be switched to "ON" (low range) and the shift lever set to speed 1.
- In whatever working conditions the corresponding boom critical angle is shown in the chart. The crane can tip over if the boom is lowered below the critical angle even if unloaded.
Therefore, never lower the boom below these angles.
- The standard parts of line for each boom length are as indicated in the chart. If you work with a non-standard number of parts of line, do not exceed 37.2kN (3.8tf) per wire rope respectively.
- For pick and carry operation, lower the load to just above the ground and keep your speed strictly below 2km/h to avoid swinging the load.
Take particular care to avoid sharp turns, sudden starts and stops.
- High-speed lowering operation should only be performed to allow descent of the hook alone.
Avoid sudden lever operation. Also, you cannot perform high-speed lowering operation with more than 7 parts of line on the hook.
- Never operate the crane during pick and carry operation. The slewing brake must be applied.
- If you work with a load in excess of the lifting capacity or use incorrect working procedures, you are risking damaging the crane or tipping it over. In such cases, the crane will not be guaranteed.


WORKING RANGE

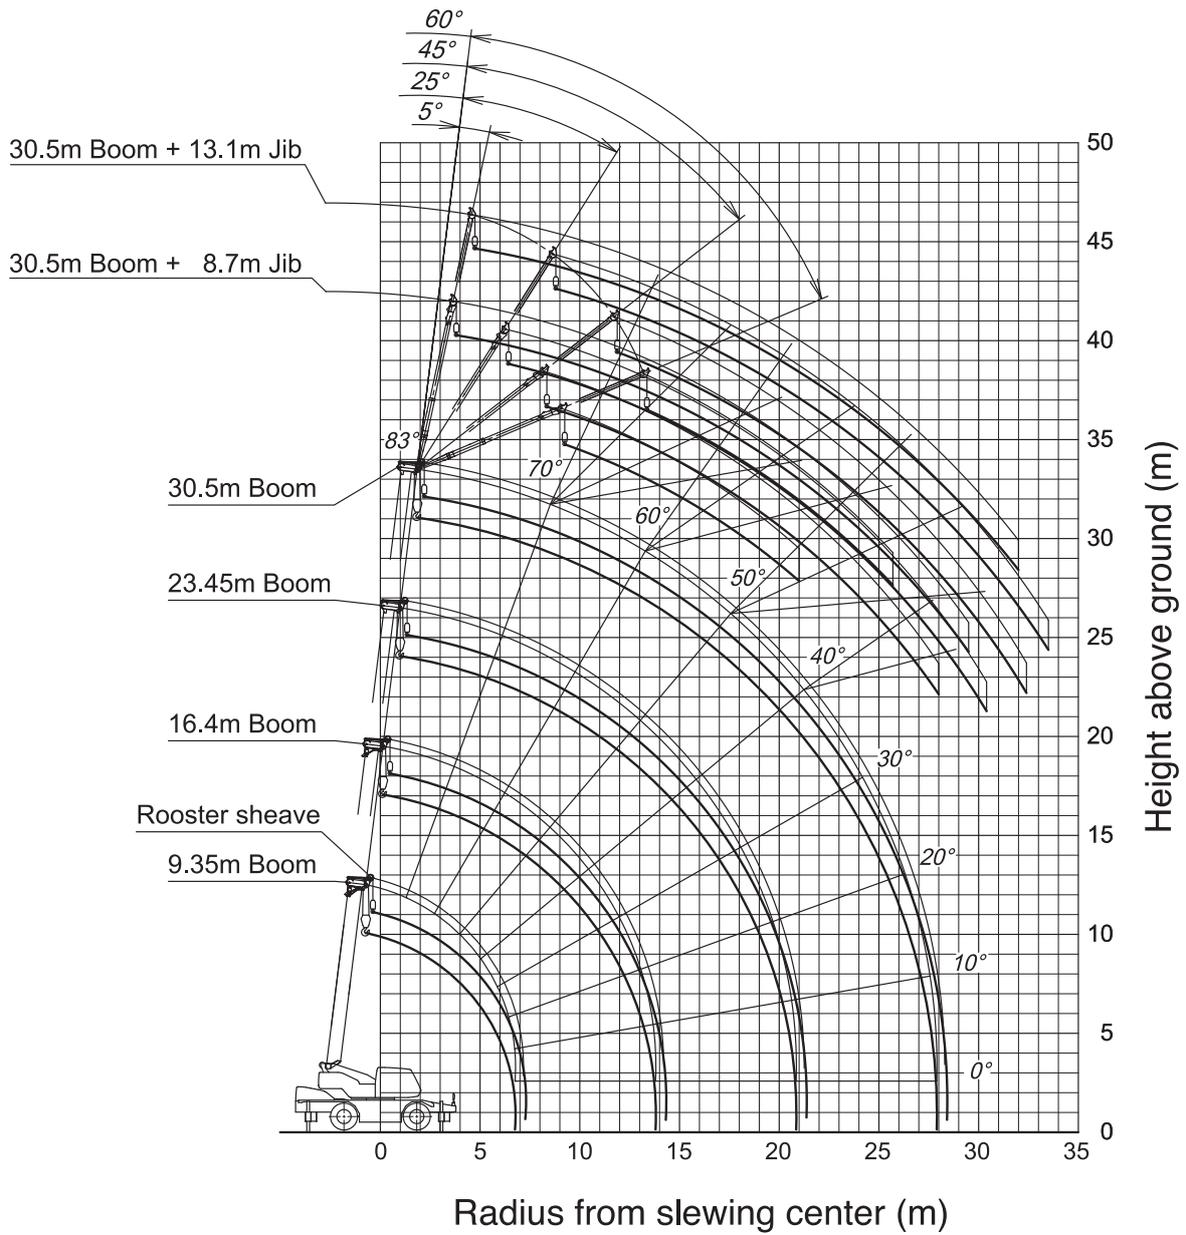

- Note:
1. This diagram does not include deflection of the boom and fly jib.
 2. This diagram is for the crane with the outriggers fully extended (all around).


Minimum path width

● Right turn in two-wheel steering mode

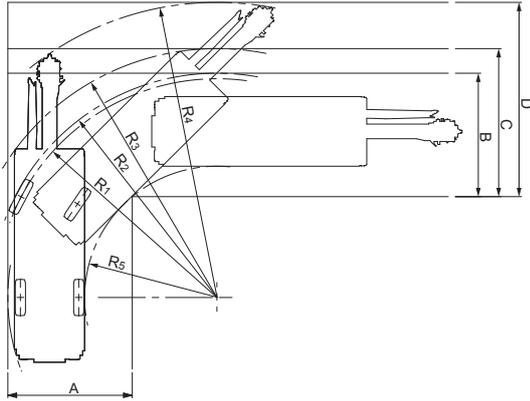

- $R_1=8.20\text{m}$
(Minimum turning radius)
- $R_2=8.40\text{m}$
(Turning radius of extremely outer tyre)
- $R_3=9.33\text{m}$
(Chassis turning radius)
- $R_4=11.07\text{m}$
(Boom end turning radius)
- $R_5=4.92\text{m}$
(Turning radius extremely chassis inner)
- $A=4.63\text{m}$ (Width of entrance)
- $B=4.63\text{m}$ (Width of wheel exit)
- $C=5.55\text{m}$ (Width of chassis exit)
- $D=7.29\text{m}$ (Width of exit at end of boom)


● Right turn in 4-wheel steering mode

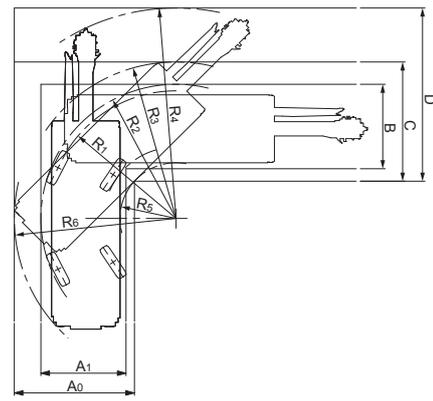


- $R_1=4.90\text{m}$
(Minimum turning radius)
- $R_2=5.10\text{m}$
(Turning radius of extremely outer tyre)
- $R_3=6.01\text{m}$
(Chassis turning radius)
- $R_4=8.09\text{m}$
(Boom end turning radius)
- $R_5=2.10\text{m}$
(Turning radius extremely chassis inner)
- $R_6=6.17\text{m}$
(Turning radius at the rear end of the chassis)
- $A_0=4.58\text{m}$ (Width of chassis entrance)
- $A_1=3.25\text{m}$ (Width of wheel entrance)
- $B=3.25\text{m}$ (Width of wheel exit)
- $C=4.58\text{m}$ (Width of chassis exit)
- $D=6.65\text{m}$ (Width of exit at end of boom)

Note: The above values are based on calculations.

Overall view

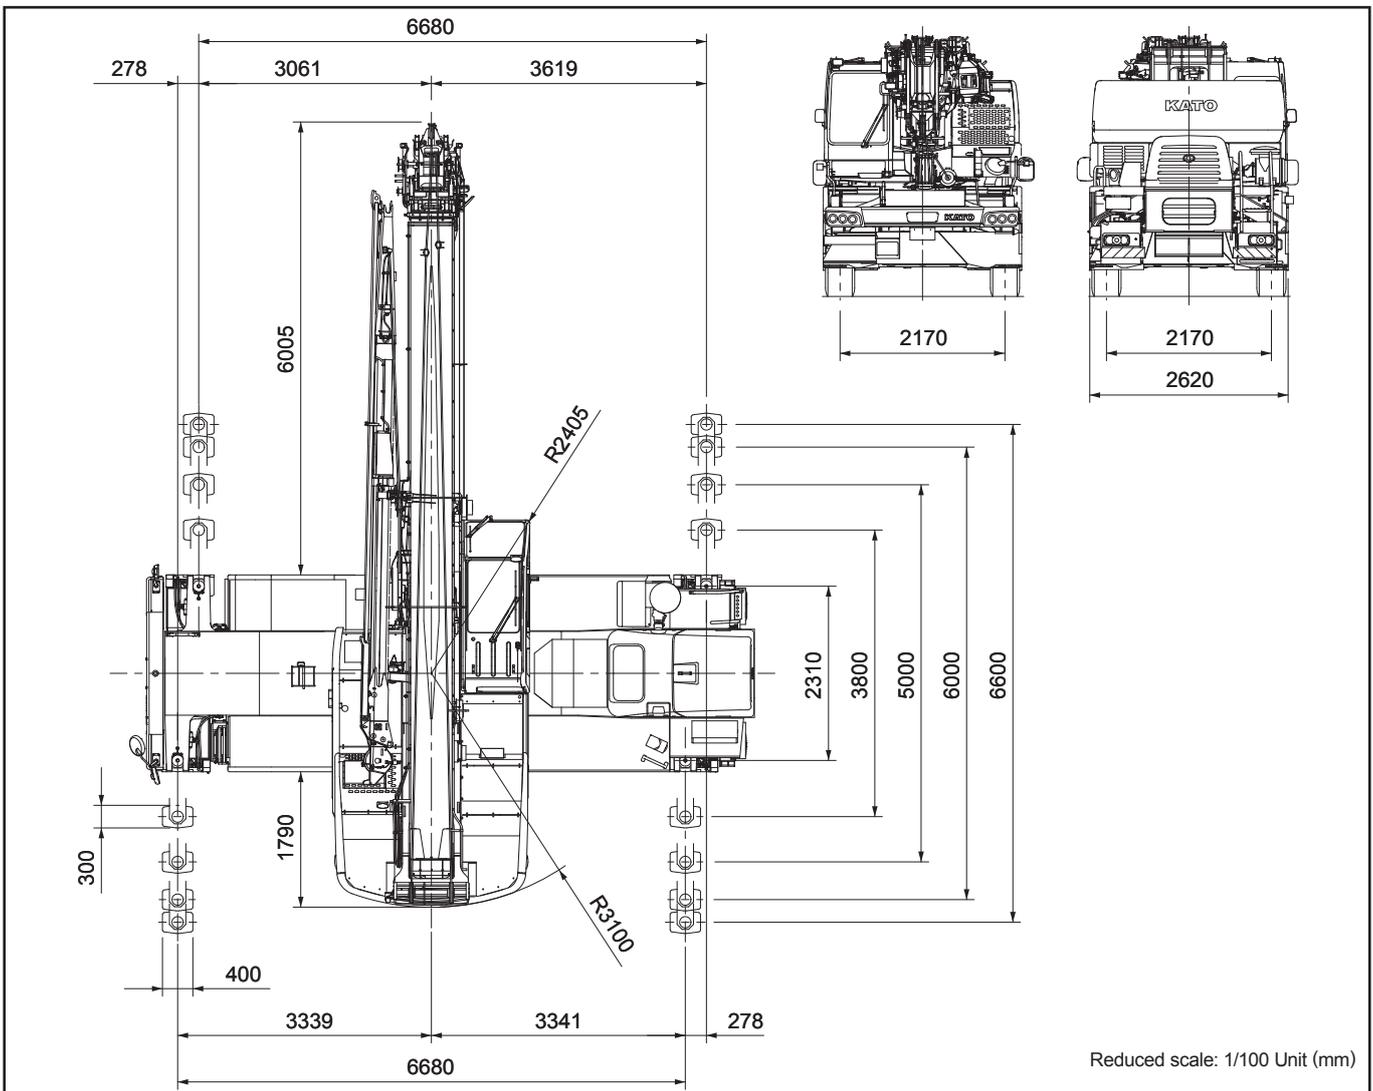

Overall view

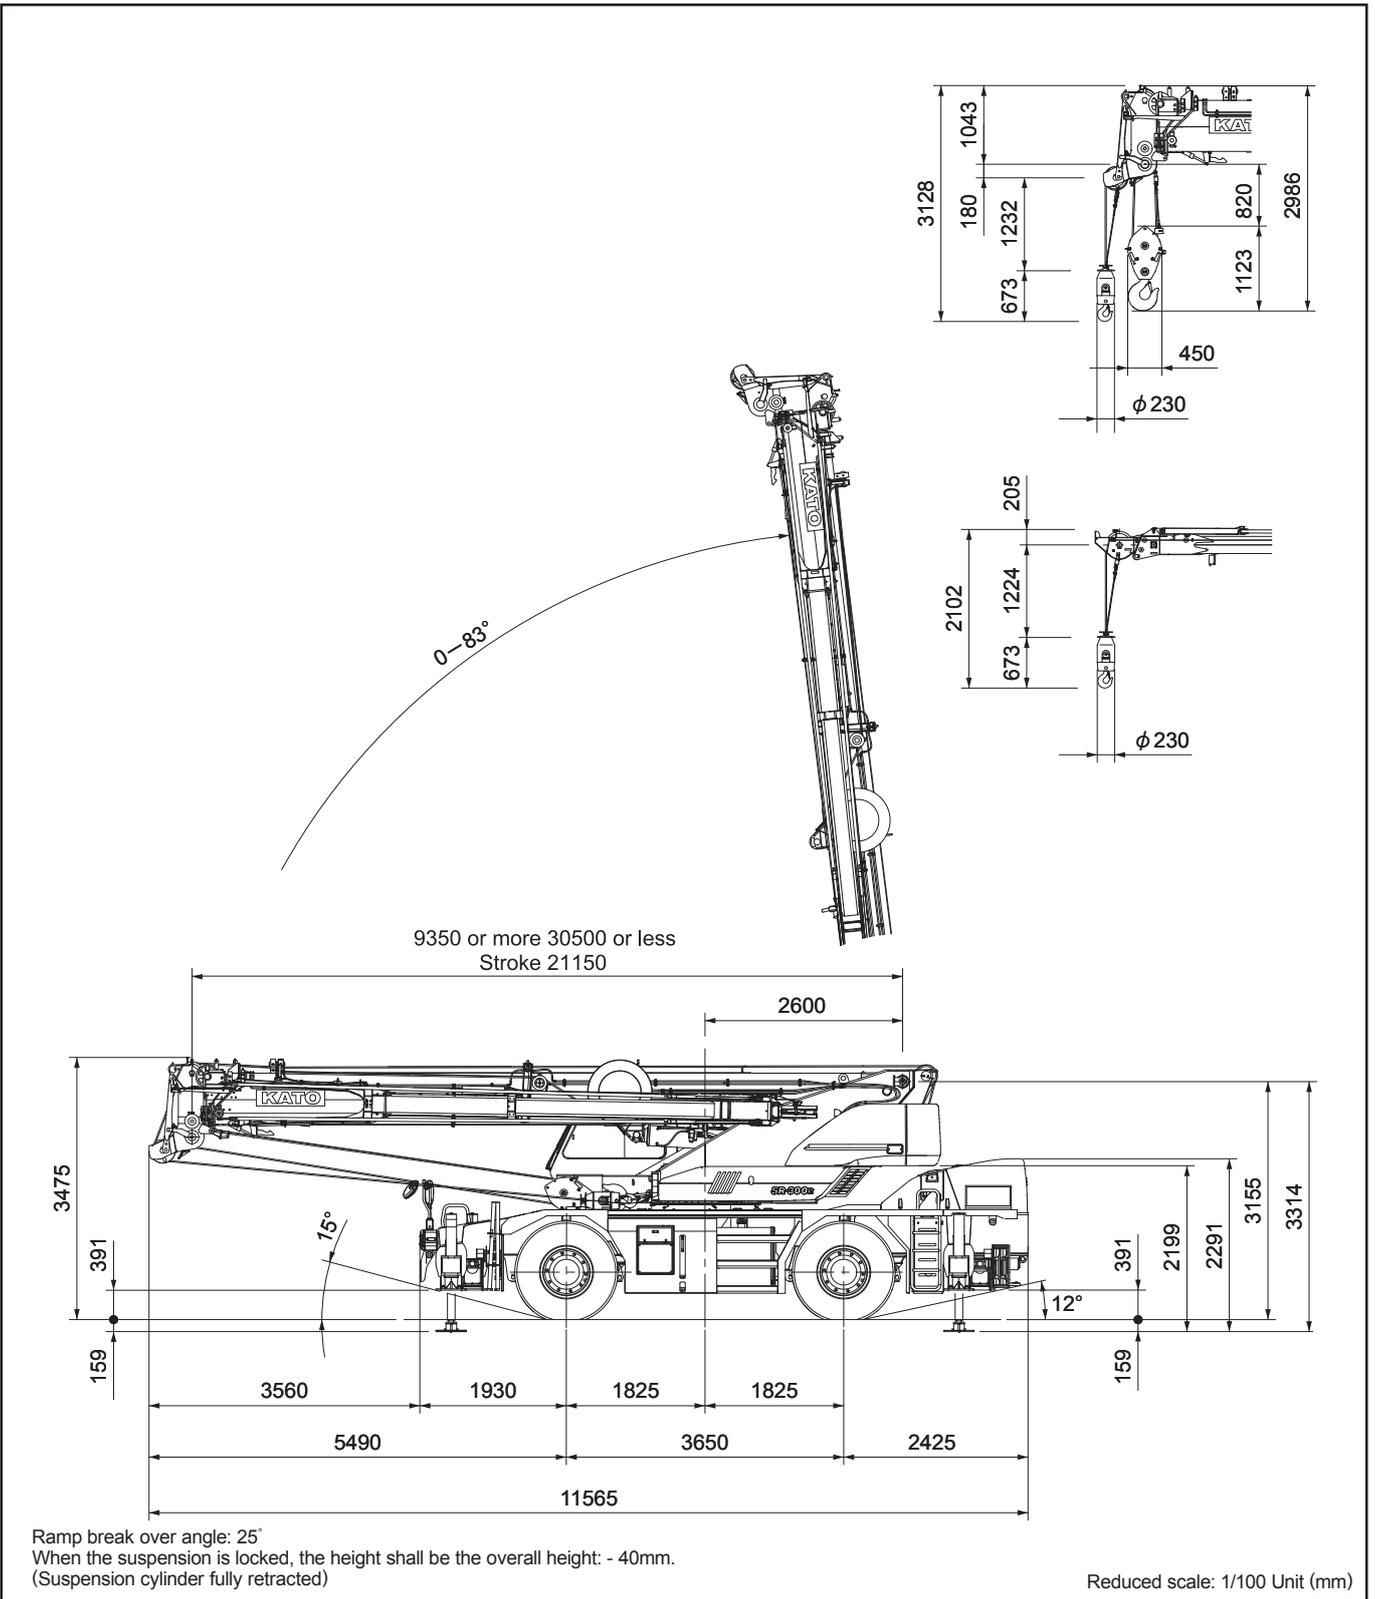

* KATO products and specifications are subject to improvements and changes without notice.

Address inquiries to:

KATO

KATO WORKS CO.,LTD.

9-37, Higashi-ohi 1-chome, Shinagawa-ku, Tokyo, 140-0011, Japan

Tel. : Head Office Tokyo (03) 3458-1111
Overseas Marketing Department. Tokyo (03) 3458-1115

Fax. : Tokyo (03) 3458-1152

URL <http://www.kato-works.co.jp>

C04991

3.2019-2000 (TI) 1